



# How to Measure U-Bolts


A = Rod Diameter  
 B = Width Between Legs  
 C = Leg Length

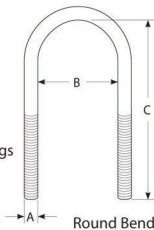


Round Bend

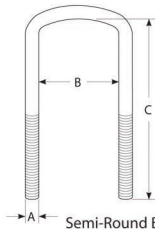

Semi-Round Bend

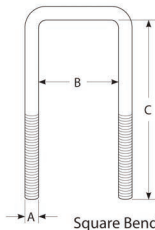

Square Bend

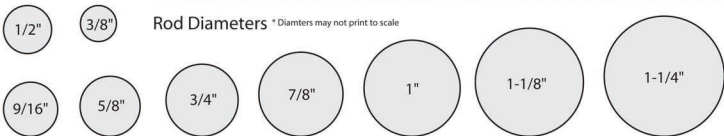

## Metric to Inch Conversions U-Bolt Diameters

Metric Diameter	Use Inch Diameter
13mm (.512")	1/2"
14mm (.551")	9/16"
16mm (.630")	5/8"
20mm (.787")	3/4"
22mm (.866")	7/8"

Heavy Duty Trucks,  
 Light Duty Trucks, Vans,  
 Motorhomes and Trailers

- Hellwig Helper Springs
- Air Bag Kits
- Timbren Kits
- OEM Replacment Leaf Springs
- Suspension Lift Kits & Leveling Kits
- 8 Bay Garage in business for two decades

